


QUICK START GUIDE


1. Insert Battery




2. Attach Eartips

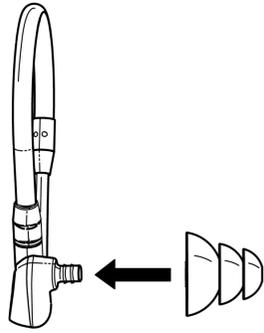

3. Connect Headset

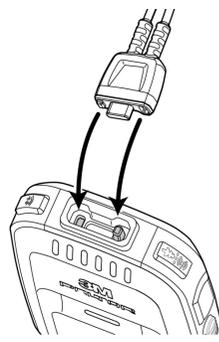

4. Attach the System Control Unit (SCU)

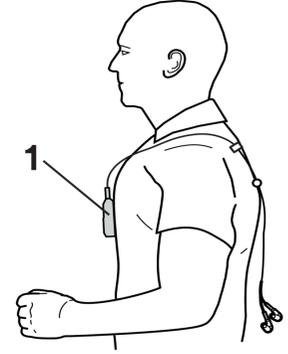

Attach the SCU (1) to a shirt pocket, reflective vest, or jacket.

5. Insert Left and Right Earplugs


a) Position the cables over one shoulder so that the clip and slider are behind you.




b) Bring the earplugs forward over your shoulders.



c) Identify the left and right earpieces by the "L" and "R" markings.

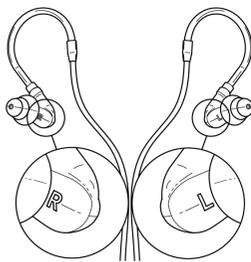


d) Hook the right earhook around your right ear.

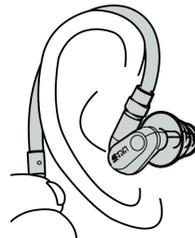

e) TWIST the earpiece into your ear canal while pulling your ear upward and outward away from the head.




f) Mold the earhook around the back of your ear until it feels comfortable and secure. Repeat steps d-f with the left earpiece.

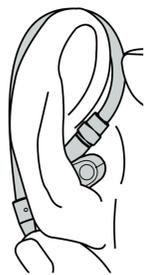


Manage Cables with Clip & Slider


g) Adjust the cable slider (1) to the back of your head.

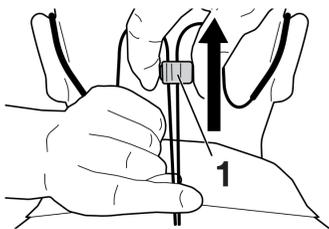

h) Attach the clip (2) to the back of your shirt collar.

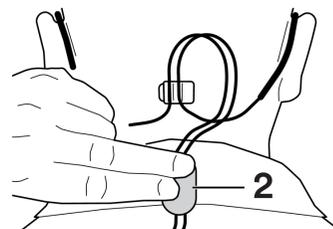

i) Leave enough slack in the cables to be able to turn your head without feeling any tugging from the wires.

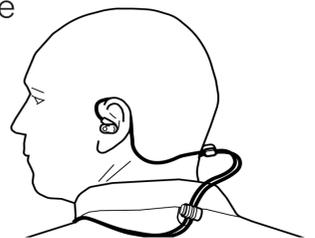

6. Press Power

Power on the SCU by pressing the Power/Menu button for 5 seconds.



SCU powering on:




Audio message: "Power on"

7. Find Noise and Fit Test


Walk into work environment where there is noise and conduct a fit test.

To start a real-time fit test, press and hold the Fit test/channel button (2) for 1 second. Release when you hear a beep.

The SCU will show the real-time fit test progress and result by means of the indicators (1).

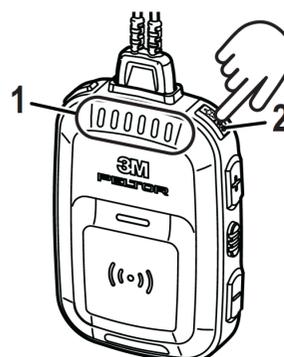

Fit test in progress:

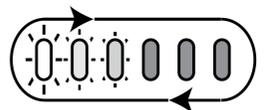

Audio message: "Fit test in progress"

Conclusive for both ears:



Audio message: "PAR value + eartip type"